



UV Sanitizer & Dryer

UV Sanitizer & Dryer

User Manual



babyfeet®

THANK YOU

The Babyfeel UV Sanitizer & Dryer was created to serve all of your family's sanitizing needs and we are delighted to share its huge benefits with you.

As a mom of two, I feel extremely blessed being able to support your family's health and I see it as our highest priority. At Babyfeel, we are truly passionate about every single customer and we are here to make sure you are totally happy with your purchase.

If you have any questions or experience any issues, please don't hesitate to contact us directly at hello@baby-feel.com. We would love to hear from you and help resolve any concern as quickly as possible.

Warmly,

Dalia

Mom & Founder @Babyfeel

TABLE OF CONTENTS

—	1.	Getting Started	01
	1.1.	Some Safeguards	01
	1.2.	Before The First Use	02
	1.3.	Product Specifications	02
	1.4.	Product Certifications	02
—	2.	Your Product	03
	2.1.	Contents	03
	2.2.	Product Components	04
	2.3.	Panel Features	05
	2.4.	What Can Be Sanitized	06
	2.5.	Sanitizing Options	08
	2.5.1.	Sanitize Mode	09
	2.5.2.	Dry Mode	09
	2.5.3.	Sanitize + Dry Mode	10
	2.5.4.	Store Mode	10
	2.6.	Usage Tips	11
—	3.	Maintenance	12
	3.1.	Cleaning The Product	12
	3.2.	Replacing The Filter	13
	3.3.	Replacing The UV Light Bulb	14
—	4.	Register Your Free Warranty	15
	4.1.	Warranty	15

1. GETTING STARTED

— 1.1. Some Safeguards

To make sure you and your family enjoy the product safely and to the max, please read all instructions before using the product.

1. Be sure to check the voltage label at the bottom of the product to verify it corresponds with your local mains voltage prior to plugging it in.
2. Check the product's cable and light bulbs for any damage. In the unlikely event that some kind of damage exists, please do not plug it in and contact us at hello@baby-feel.com for a quick resolution.
3. The Babyfeel UV Sanitizer & Dryer is designed to prevent exposure to ultraviolet radiation. Make sure the lid is always closed while operating. If you would like to stop or cancel a cycle, make sure to do so through the control panel.
4. The product is designed for indoor household use only.
5. When not in use, the product should be stored in a cool and dry place away from direct sunlight.
6. Do not place the product close to heat or fire sources.
7. Keep product away from the reach of children.
8. Refrain from using the drying function for electric items.
9. Do not lift or move the product when in use.
10. To protect against electric shock, keep the product away from liquids and do not place close to a tub or sink.
11. Turn off the product prior to unplugging it.
12. Do not use the product for purposes other than those intended.

1.2.

Before The First Use

1. Place the product on a flat surface allowing at least a **5 inch gap** between the product and wall to ensure proper ventilation.
2. Wipe the inside compartment with a clean damp cloth (preferably microfiber), followed by a dry cloth to ensure **no water residue** is left in the compartment.
3. In order to remove any possible smell of new materials from the compartment, we recommend running one cycle of the **“Sanitize + Dry”** mode.

1.3.

Product Specifications

Product Name	UV Sanitizer & Dryer
Model	UV-6900
Voltage	120V, 60HZ
Sanitizing Power	8W
Drying Power	75W
Inner Capacity	7L
Net Weight	4.9 LBS
Product Measurements	11.02*11.02*9.7 INCH
Intended Use	Household Use Only

1.4.

Product Certifications

EPA Establishment Number: 97442-CHN-1

FCC Tested by Waltek: WTF26F01011080E


TÜV Rheinland Certificate No. : US 72503364 0001

TÜV Rheinland Report No. : CN2555JK 001

CAS Tested for Sanitization Effectiveness, Report Number: JKK26010046

2. YOUR PRODUCT

— 2.1. Contents

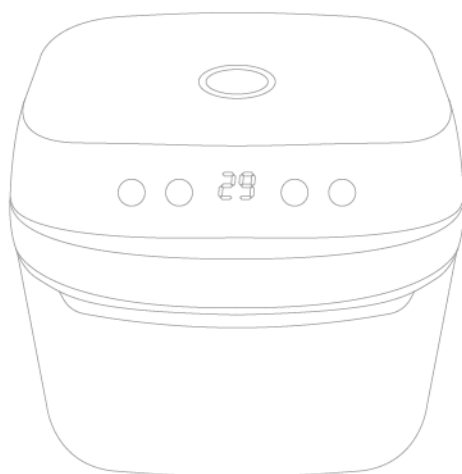

UV Sanitizer & Dryer



Extra Filters (x3)




User Manual



Accessories Basket

2.2.

Product Components

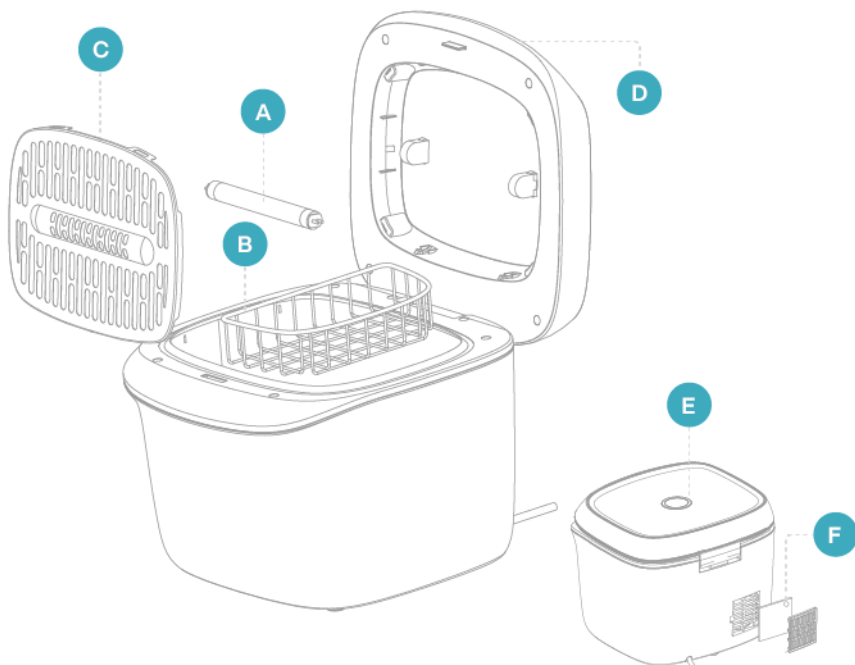

Items

A UV Light Bulb

B Accessories
Basket


C Protective
Cover

D Control
Panel

E Operating
Indicator Light

F Filter

2.3. Panel Features

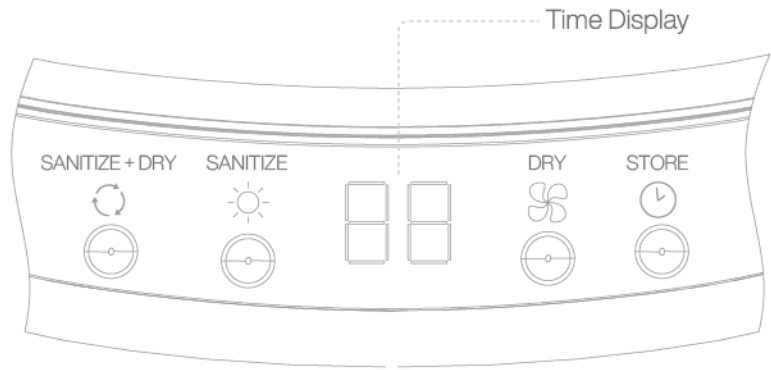

Mode	Description	Duration Options
SANITIZE 	Select this mode to sanitize items with no drying. For electronic items, only use this cycle.	Default: 11 minutes Option: 16 minutes, 21 minutes
DRY 	Select this mode to dry items with no sanitizing.	Default: 51 minutes Option: 41 minutes
SANITIZE + DRY 	Select this mode to sanitize and dry items.	Default: 51 minutes Option: 61 minutes
STORE 	Select this mode to sanitize and dry items and keep them sanitized for up to 72 hours.	51 minutes of the "Sanitize + Dry" cycle, followed by short two minute cycles of sanitization every two hours for up to 72 hours

2.4.

What Can Be Sanitized

You can place countless types of items inside the Babyfeel UV Sanitizer and Dryer. Here are a few pointers:

1. If it fits, it can be sanitized.
2. The “Dry”, “Sanitize + Dry” and “Store” modes, all use heat in order to dry items and therefore are **not intended for electronic items** of any sort. For those items only use the “Sanitize” mode.
3. Use the basket for **smaller accessories**.
4. Remove the basket to accommodate **larger items**.

Here are just a few examples of items that can be sanitized by mode.

“Sanitize” Mode:



Electronic Items

(Tablets, Cell Phones, Remote Controls, Game Controllers, Airpods)



Personal Care

(Beauty Tools, Toothbrushes, Hair Brushes, Combs, Razors)



Everyday Items

(Credit Cards, Keys, Wallets, Cloths, Watches, Glasses, Masks)



Baby Feeding Equipment

(Bottles, Pumping Parts, Baby Tableware)



Baby and Kids Items

(Toys, Stuffed Animals, Teethers, Pacifiers)



Kitchen Items

(Tableware, Kitchen Tools)

“Dry” Mode:



Baby Feeding Equipment

(Bottles, Pumping Parts, Baby Tableware)



Kitchen Items

(Tableware, Kitchen Tools)

“Sanitize + Dry” Mode:



Baby Feeding Equipment

(Bottles, Pumping Parts, Baby Tableware)



Kitchen Items

(Tableware, Kitchen Tools)

“Store” Mode:



Baby Feeding Equipment

(Bottles, Pumping Parts, Baby Tableware)




Kitchen Items

(Tableware, Kitchen Tools)

2.5.

Sanitizing Options

For each function simply **(1)** open the lid **(2)** place items in an upright position and smaller items in the accessories basket **(3)** close the lid and select the desired function by clicking on the button of that function.

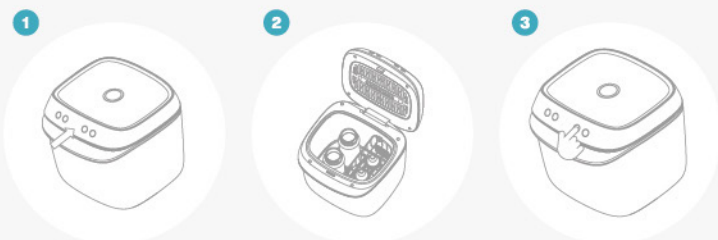

1. To start a function, press the desired function button. Pressing again will switch between the various time options for that specific function. When you stop pressing, the light will **flash twice** to indicate the cycle has started. To cancel the cycle, simply press the button again.
2. The time display will indicate the time remaining for the cycle.
3. When the cycle ends, the product **beeps six times** and returns to standby mode.
4. All feeding items should be thoroughly washed prior to placing in the compartment.
5. For best results, wipe down the inside of the product with a dry microfiber cloth after every use to remove any water marks.
6. **No liquids** should be used in the product.
7. Ensure the lid is securely closed during operation. To stop or cancel the cycle, press the same cycle button on the control panel. Opening the lid during a cycle will pause the cycle and activate the Memory Function, indicated by the flashing [] icon on the display. Once the lid is closed, the cycle will resume from where it stopped. For optimal results when using the sanitizing function, it is recommended to restart the cycle to ensure proper sanitization.

— 2.5.1.

Sanitize Mode

To allow thorough sanitization, make sure items are not touching or placed one over the other.

Remember, items should be completely dry prior to starting the sanitizing mode.

When sanitizing items such as bottles, bottle nipples or cups, place them so that the opening is facing up. If they do not stand, lay them down for the openings to be exposed.

1. To start, open the lid and place items as shown in figures 1 & 2.
2. Press the button marked “**Sanitize**”. The default duration of the function is 11 minutes. If you are sanitizing baby feeding items and your little one is very young or vulnerable, you can press the button again to increase the time to 16 or 21 minutes.
3. When the cycle ends, the product will **beep six times** and will return to standby mode. You may open the lid and remove the items.

— 2.5.2.

Dry Mode

Prior to using the drying function, make sure to remove any excess water from the items. This mode is **not intended for electronic items**. For those items only use the “Sanitize” mode.

1. To start, open the lid and place items as shown in figures 1 & 2.
2. Press the button marked “**Dry**”. The default duration of the function is 51 minutes. If the items in the compartment are already almost dry or if it's partly full, you may click on the “Dry” button once again to reduce the drying time to 41 minutes.
3. When the cycle ends, the product will **beep six times** and will return to standby mode. You may open the lid and remove the items.
4. You may open the lid and remove the items. They are now **ready to be used**. No cooling time is necessary.

2.5.3.

Sanitize + Dry Mode

Use this function when the items require drying and sanitization. This mode is **not intended for electronic items**. For those items only use the “Sanitize” mode.

1. To start, open the lid and place items as shown in figures **1 & 2**.
2. Press the button marked **“Sanitize + Dry”**. The device will initially preform a drying cycle and automatically continue to a sanitizing cycle. The default duration is 51 minutes. If the items in the compartment are freshly washed or if it's relatively full, you may click on the “Sanitize + Dry” button again to increase the cycle time to 61 minutes.
3. When the cycle ends, the product will **beep six times** and will return to standby mode. You may open the lid and remove the items.
4. You may open the lid and remove the items. They are now **ready to be used**. No cooling time is necessary.

2.5.4.

Store Mode

Use this function to keep items sanitized for up to **72 hours**. The device will run short sanitization cycles automatically after one “Sanitize + Dry” cycle.

This mode is **not intended for electronic items**. For those items only use the “Sanitize” mode.

1. To start, open the lid and place items as shown in figures **1 & 2**.
2. Press the button marked **“Store”**. The device will initially perform the sanitizing and drying function with a duration of 51 minutes. As long as the lid is closed, the items will remain sanitized for up to 72 hours. The device will perform two minute sanitization cycles every two hours.
3. When the cycle ends, the product will **beep six times** and will return to standby mode. You may open the lid and remove the items.
4. You may open the lid and remove the items. They are now **ready to be used**. No cooling time is necessary.

2.6. Usage Tips



The digital display will indicate the time remaining in the cycle



Press the desired function button to start and switch between cycle options. To cancel when operating, press the button again



Spread the items that need to be sanitized



Items should be placed with openings facing up or to their side



Remove all lids, separate all components



Remove excess water from items

3. MAINTENANCE

3.1.

Cleaning The Product

1. Unplug the product.
2. Remove the accessories basket.
3. Using a damp microfiber cloth, wipe the inside of the compartment to remove any water marks.
4. Wipe with a dry microfiber cloth to ensure no marks remain. The stainless steel needs to be clean to achieve the best sanitization results.
5. Wipe down the accessories basket as well prior to installing it carefully back in the compartment.

Attention: Do not use chemicals, cleansers, vinegar, excess water or any other cleaning solutions inside or outside the product. This may damage the UV light bulb and the product's performance.




3.2.

Replacing The Filter

We recommend replacing the filter of your UV Sanitizer & Dryer **every 6 months**. 3 extra filters are included in the box for your convenience.

1. Unplug the product.
2. Locate the filter at the back of the product.
3. Remove the cover by gently pulling on the small latch.
4. Dispose of the old filter.
5. Place the new filter over the vent and close the cover.

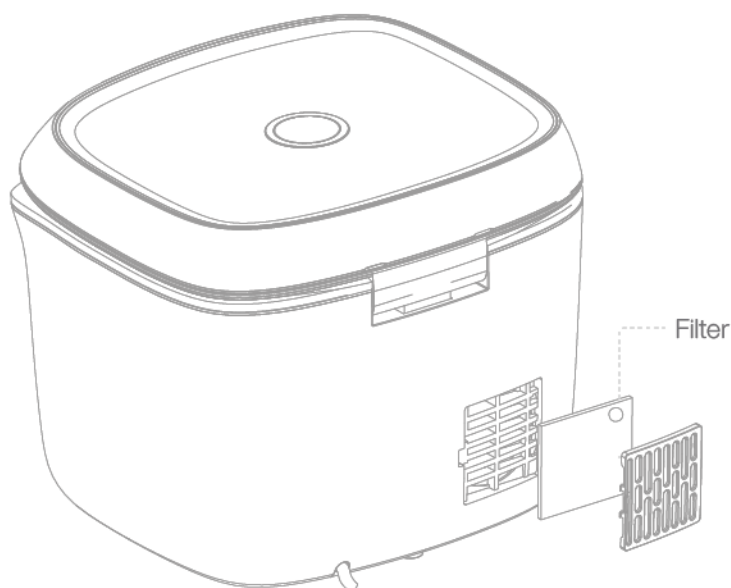

3.3.


Replacing The UV Light Bulb

We recommend replacing the light bulb of your UV Sanitizer & Dryer every **24 months**.


The light bulb's lifespan depends on usage. On average, this light bulb should last for **6000 hours**.

We recommend replacing the light bulb using gloves to maintain the performance of the light bulb.

1. Unplug the product.
2. Allow some time for the light bulb to cool down.
3. Carefully remove the protective cover by inserting a flat head screwdriver on the side edges of the protective cover.
4. Hold the ends of the light bulb and gently rotate it as shown in the figure below. When it loosens, gently pull to remove.
5. To install a new light bulb, place the light bulb straight into the sockets and rotate until it's secure in place.
6. Return the protective cover by pushing it gently in place. Make sure to do that **slowly** in order not to damage the light bulb.

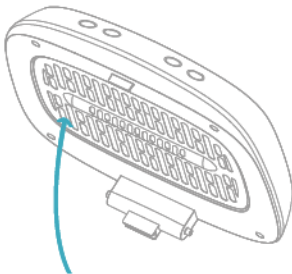

Protective Cover

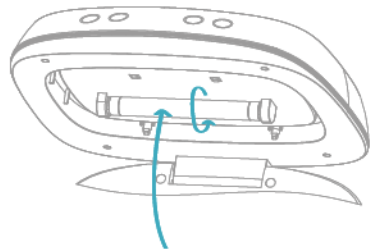

UV Light Bulb

4. REGISTER YOUR FREE WARRANTY

The Babyfeel Sanitizer & Dryer is made to last, and arrives with one filter installed and three replacement filters in the box, so you can always make sure your items will be completely sanitized and dried.

Don't forget to register your free warranty and we will send you two extra filters with no charge (including shipping on us) to make sure the product will serve you and your family for many years to come!

VISIT: www.baby-feel.com/warranty

